


# USER MANUAL FOR DIESEL HEATER

## MANUAL CONTROLLER

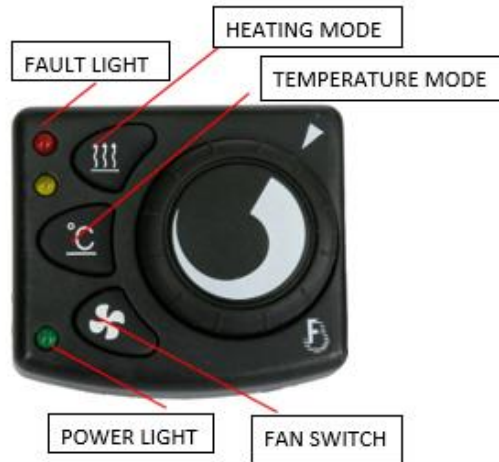

### Heating Mode-

By pushing the heat mode button your heater will continuously run, speeding up and down to regulate to your desired temperature you have selected with the temperature control knob simply push button again to switch off

This is the best way to run your diesel heater.

### Temperature Mode-

This is a non-preferred way to run your diesel heater for it with continually stop and start your diesel heater thus causing large current draw and reducing your life of your glow plug.

### Fan switch

Is for fresh cold air only and will only allow the fan of the diesel heater to run.

To install the controller, remove the temperature control knob & using the screw provided you can attach the controller to the wall, In most cases the double sided tape provided will be enough

If the red light starts to flash at any time this indicates it is in fault mode, count the number of slow flashes which will tell you what the problem is, please refer to user manual for fault code references.